

TIPES SMS-BOX

TIPES



Instructions

Motz-Computer
Service und Vertriebs GmbH
Pfennigbreite 20-22
D-37671 Hörter
Germany

Contents

1. DELIVERY.....	3
2. PREPARATION AND INSTALLATION.....	3
3. SMS-FUNKTION (OPTIONAL).....	4
How do I activate the SMS feature?.....	4
SMS-Number.....	4
SMS-Pigeon.....	5
How does the process of transmission of SMS?.....	5
WARRANTY CONDITIONS:.....	6
IMPRINT.....	7

1. Delivery

- TIPES SMS BOX
- Power Supply
- Antenna
- Connector Cabel
- Instruction

2. Preparation and Installation

Please remove the red cap to the TIPES SMS-BOX and attach the small antenna. Next, open the TIPES SMS-BOX the SIM card slot. To do this, press the little white pin labeled "Push the button to extract the SIM". Insert the SIM card and close the tray.

Principal Areas! Please note this is set on your SIM card has no PIN request. Should be set a PIN number, you must first disable it with your cell phone. Refer to the manufacturer's manual.

Now connect the cable (+ adapter) with the TIPES SMS-BOX and the MC2100 TIPES on port 5 Then connect the power supply.



3. SMS-Funktion (Optional)

Setup

Speed
Time / Date
Printer
SMS-Number
SMS-Pigeon
Setup Registration
Contrast

The SMS feature is not included, and can be purchased.

How do I activate the SMS feature?

In the setup menu to activate the phone. There you will have to make two settings:

SMS-Number

SMS-Number

!+491710000021
No entry
No entry
No entry
+49527197040

You can enter up to five destination numbers. Please type the numbers one after the international standard, ie the local code is always preceded by the country code. That means for Germany, the 49th Then they enter the area code without "0" and the desired telephone number. "No entry" means that you have given no target number.

If before the number one "!" Appears, this number is activated. To disable the number, press the "Left arrow" and the "!" Disappears. To activate the number, press the "arrow-right" and the "!" appears.

Example: +49 171 0000021

The "+" sign is fixed. You will now enter the country code. In this case, 49 for Germany. The area code for a mobile number, it is the operator number here "171" without the zero. The code must be entered on principle.

You can also send SMS message to a landline number, so the target number receives a voice message with the content of sent SMS.

There are only short messages (SMS) sent to numbers that are enabled.

SMS-Pigeon

SMS-Pigeon

10

Here you specify the number of pigeons that are to be reported via SMS. If you are here for example Enter 10, the first 10 pigeons are transmitted via SMS.

How does the process of transmission of SMS?

The first registered pigeon is transferred immediately. The transfer is always on the activated target numbers. After the transfer, four pigeons always be transmitted in a text message. However, there are no four pigeons arrived within a minute, so the pigeons will be transferred, have been registered by that date.

Warranty conditions:

In all TIPES ® components manufacturer is a guarantee of

2 Years

from the date of delivery to the following conditions, provided:

- a. The warranty is conditioned on submission of a purchase receipt.
- b. If any defects occur, the manufacturer is entitled to choose up to two times for repair (repair) or even to supply a replacement unit. If the repair / replacement is in turn failed, then you can demand the cancellation of the contract or reduce the payment, if the deficiency is not corrected in time. The warranty period for the repaired or replacement equipment supplied as is 3 months, but runs at least until the end of the original warranty period. Further claims, especially claims for damages, are excluded. This disclaimer does not apply to claims under product liability law.
- c. Warranty claims are only properly for their intended use and installation of the entire TIPES ® system.

The warranty may not be made if:

1. the damage to the improper use of the unit due to an incorrect connection or improper operation is;
2. the unit was not maintained as per the recommendation of the manufacturer and is maintained, and the damage is caused thereby;
3. the damage to any modification of the device is based;
4. is the damage caused by force majeure, such as lightning came;
5. is the damage caused by leaking batteries or by the use of spent batteries or inappropriate;
6. is the damage caused by wear and tear caused by overuse of mechanical parts.
7. Lamps and fuses are not covered by the warranty.



Imprint

The information contained in this document may be changed without prior notice and are part of the company Motz GmbH no commitment on the computer without the prior written permission of the company Motz-Computer GmbH, neither the manual nor parts thereof, electronic or mechanical are means, photocopying recording or by other methods or in some other way or reproduce or transmit.

Tipes ® is a registered trademark of Motz-Computer GmbH.

© Copyright 2011 Motz-Computer GmbH

Motz-Computer
Service und Vertriebs GmbH
Pfennigbreite 20 - 22
D-37671 Hörter
Germany
Tel. 09001 184737 (0,50 € / Min)
Fax.: +49 (0)5271/9704-94
Internet: <http://www.tipes.de>
E-Mail: tipes@motz.de